Music Mode-Setup & Operation

Introduction

The Music Mode is a new feature on the MR F300 BT handset. The F300 will now support wireless music streaming using some of the more advanced functionality of *Bluetooth*® wireless technology called A2DP. The Music Mode feature is supported while the F300 is paired to most of the new Smartphones including iPhone, Blackberry, Android, Microsoft and Nokia. This wireless music streaming mode is considered to be more advanced functionality for those already familiar with playing music on their Smartphones.

Setup Music Mode

Complete the initial *Bluetooth*® Pairing process to your mobile phone just as you normally would. Follow the instructions in the F300 manual or the quick start guide for pairing your mobile phone to the F300. If you have a Smartphone which supports *Bluetooth*® A2DP audio steaming, then music streaming capability will also be setup at this time. The phone might ask if you want to enable "Media Audio", "Music Streaming" or "A2DP". Select YES or check the applicable box on the phone.

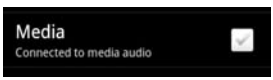

Speaker Options

There are two options for playing the music from your phone on your boat using the F300. The music can be played on the F300's own internal speaker or it can be routed out the 3.5mm stereo jack on the F300's installation cable.

- The streaming audio is played on the F300's internal speaker by default.

  Simply decrease the volume to the lowest level if you don't wish it to be played over the F300's internal speaker. The internal speaker volume can be adjusted using the UP and DOWN buttons on the front of the F300 handset. This internal speaker might be sufficient for music in smaller boats that don't have a stereo system installed.

- The preferred method is to use the 3.5mm stereo jack on the F300's installation cable to wire the music into the boat stereo's aux input jack. The jack on the boat's stereo system will likely be either another 3.5mm stereo OR an RCA jack input. These cables are not supplied and are available at most retailers selling marine audio equipment.

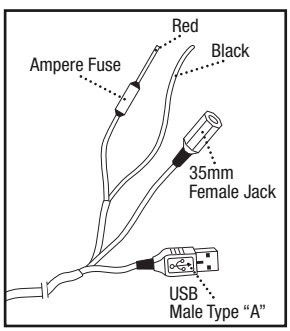

Continued on Back

©2011 Cobra Electronics Corporation Part No.: 480-698-P Printed in China

Music Mode-Setup & Operation

Music Mode Operation

- Play music on your Smartphone just as you normally would. If the F300 is properly "connected" to your Smartphone, the phone should give you the option to (or do it automatically) play the music over a *Bluetooth*® speaker.
- The F300 will change to from its normal Standby Screen to the Music Mode screen. From this screen you can perform the following functions:

1. Rewind to the beginning on 1X push. Go to previous on 2X push.
2. Play music or Pause music.
3. Stop the song and rewinds to the beginning.
4. Fast Forward to the next song.
5. This is A2DP status. The strike through shown if A2DP is not active.
6. Shows signal strength of the mobile phone with its network operator.

Trademark Acknowledgement

Cobra®, CobraMarine®, Nothing Comes Close to a Cobra®, and the snake design are registered trademarks of Cobra Electronics Corporation, USA.

Cobra Electronics Corporation™, MicroBlue™ and Rewind-Say-Again™ are trademarks of Cobra Electronics Corporation, USA.

The *Bluetooth*® word mark and logo are registered trademarks owned by *Bluetooth* SIG, Inc.